## Arctic Weather Option 090123



Cole Hinkle

 
The information contained in this document may contain confidential, proprietary and/or privileged material of either Wabtec Corporation or one of its subsidiaries. Any review, retransmission, dissemination or other use of, or taking of any action in reliance upon, this information by



#### **BACKGROUND**

- For highest level of cold weather protection, trucks need the following:
  - Cold Weather Package
  - Extreme cold weather fluids
  - Arctic weather package
- Includes: Cold air shields, battery management, insulative blankets, and condensate freeze prevention
- Time Frame: Ready for machines built in Nov. 2023








## **Radiator Shielding – Upper**

ISSUE: Freezing air reaching radiator, machine temps too low

VENTED RADIATOR SHIELD WITH SLIDING CLOSEOUT
OPEN CLOSED





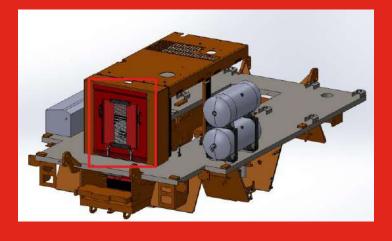

#### Installation:

- Similar mounting style to hood cover panels
- Utilizes existing grill mounting points.
- Can be taken on and off just like side cover panels


## **Radiator Shielding – Upper**

Sample parts installation






# Radiator Shielding - Upper Installation

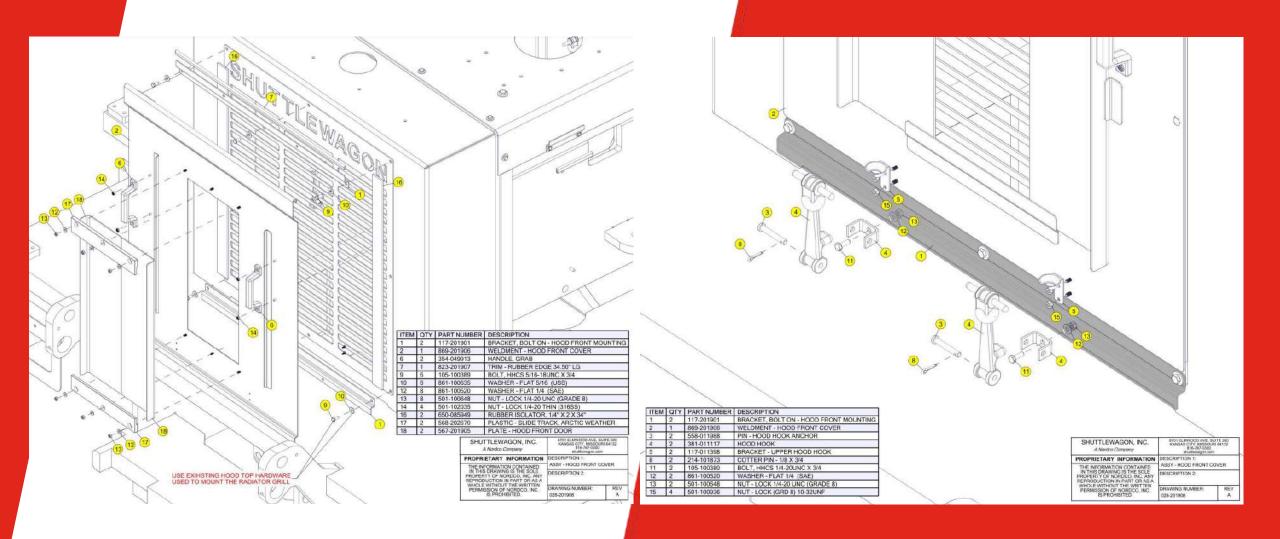


## **Radiator Shielding – Lower**


ISSUE: Freezing air reaching radiator, machine temps too low

## VENTED SHIELD WITH SLIDING CLOSEOUT OPEN

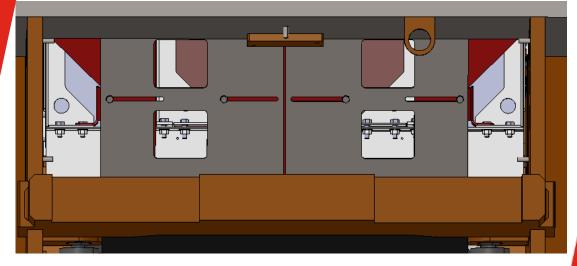

#### **CLOSED**

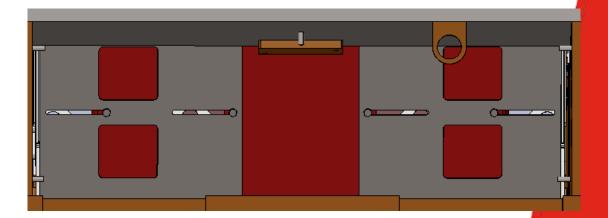


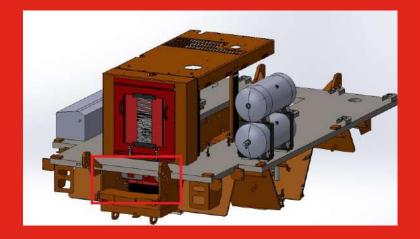


#### Installation:

- Utilizes existing radiator mounting points.
- Can be opened and closed to account for various operating temps

# Radiator Shielding - Lower Installation

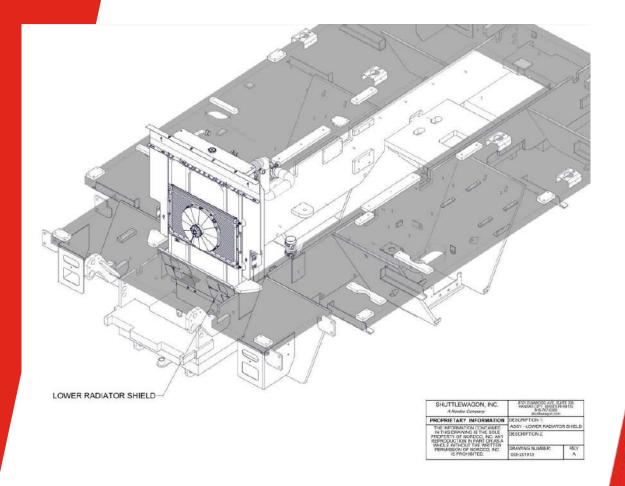


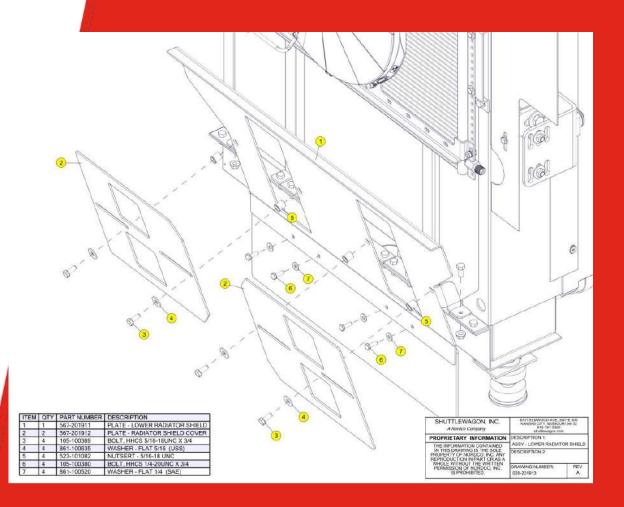


### **Battery Maintenance – 120V**

ISSUE: Batteries become cold and lose charge.

Relays become too cold to allow start.

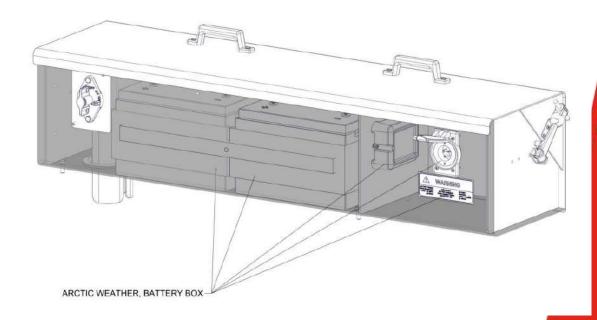

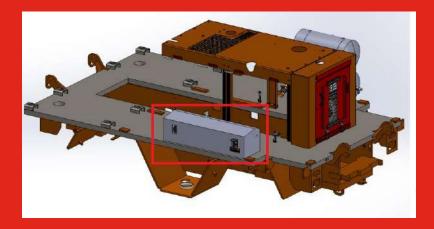



120VAC battery maintenance system, self contained in the battery box.

- 120V Outlet
- 2X Heated battery blankets
  - 0.67A each
- Battery Charger/Maintainer
  - 10 A

## **Battery Maintenance – 120V**

**INATALLATION** – Charger and Warmers.

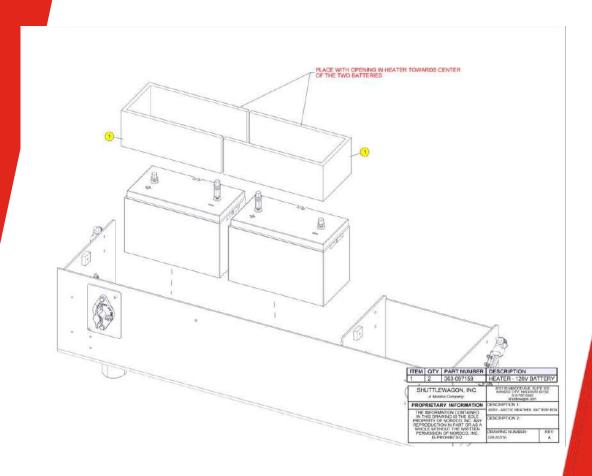


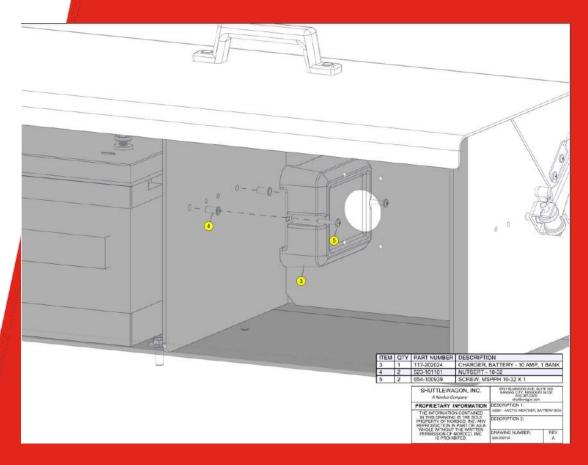

### **Battery Maintenance – 120V**


**INATALLATION – Plugs and Harness** 



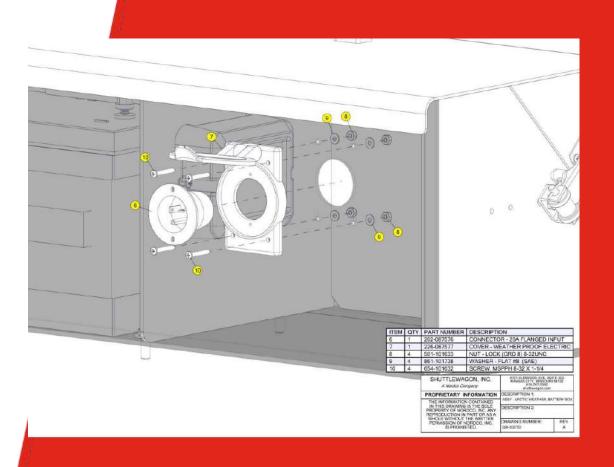


### **Insulation Blankets**

ISSUE: Extreme weather conditions affecting Thermal Bypass, Air Tanks, and Battery Box

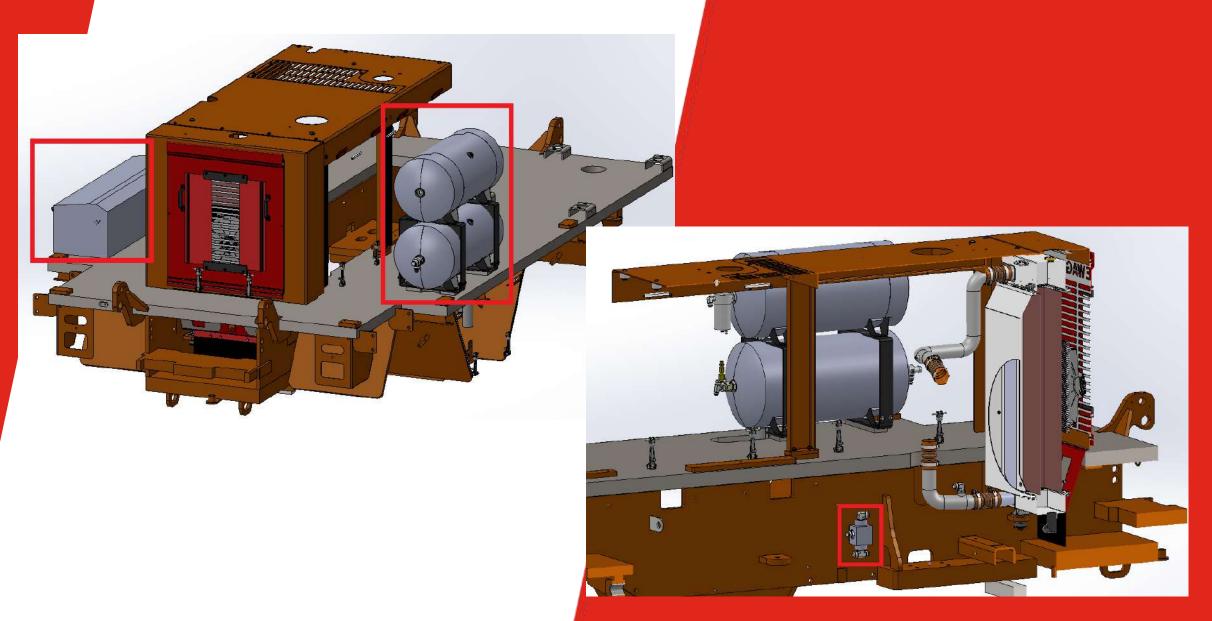


# Insulation Blankets – Air Tanks Installation

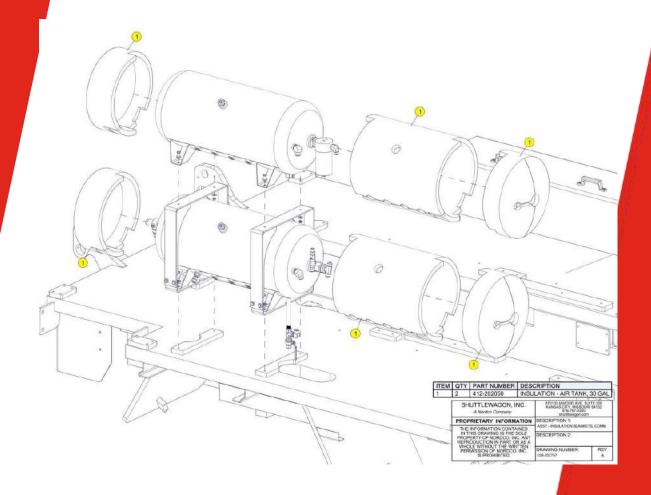




# **Insulation Blankets – Battery Box Installation**

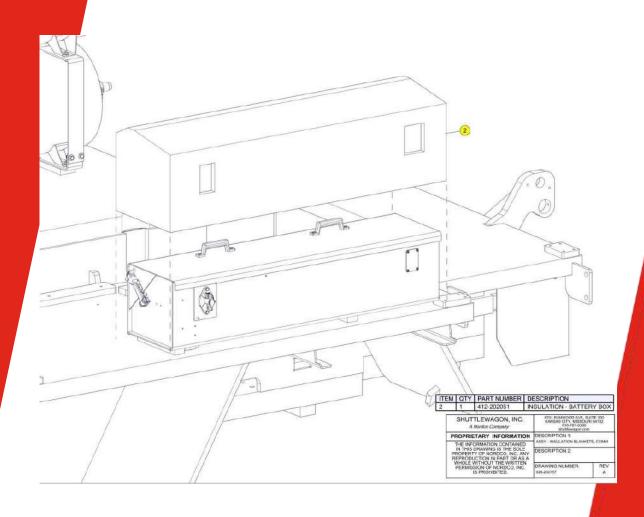




Insulation Blankets – Thermal Bypass Installation

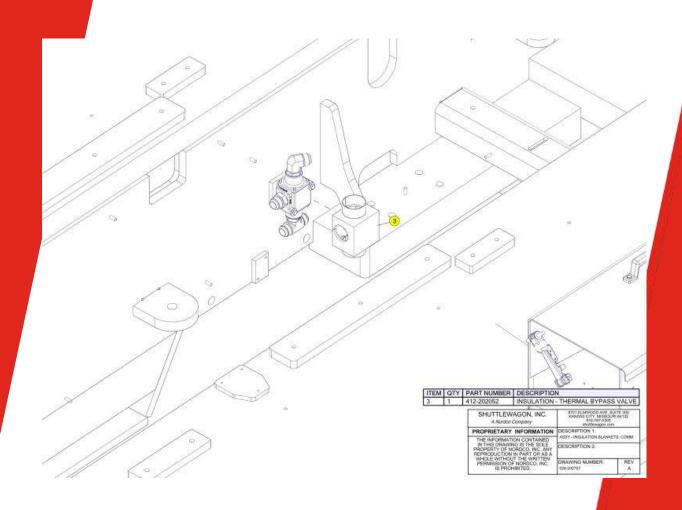




### **Condensate Freezing Prevention**

ISSUE: Condensate in the air tanks is freezing.

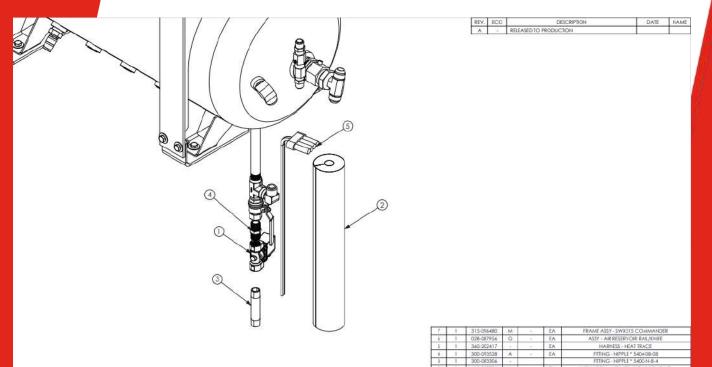

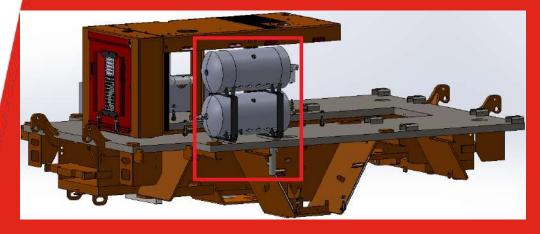

#### **Freeze Prevention:**


- Air Tank Blanket
- 12VDC Time adjustable condensate drain (Adjustable from the cab controls)
- Down-pipe insulation
- 12VDC Self regulating heat trace:

#### **Electrical Components:**


- 1/2" Solenoid Valve
  - 0.84A
- 3ft Heat Trace
  - 0.25A/ft

### **Condensate Freezing Prevention**

ISSUE: Condensate in the air tanks is freezing.

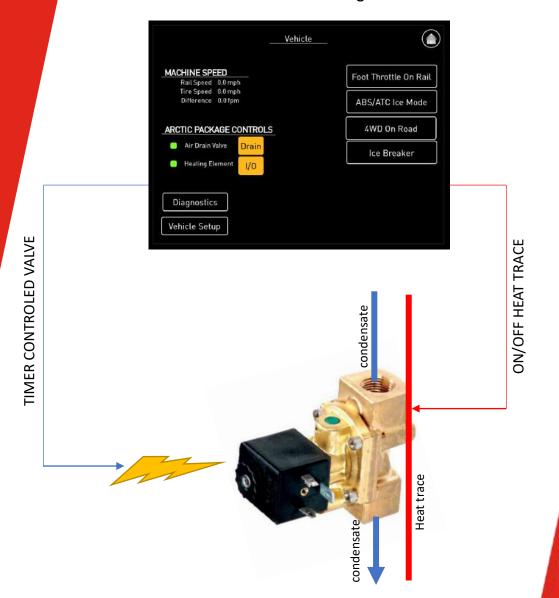

#### PASSCODE PROTECTED SETTINGS

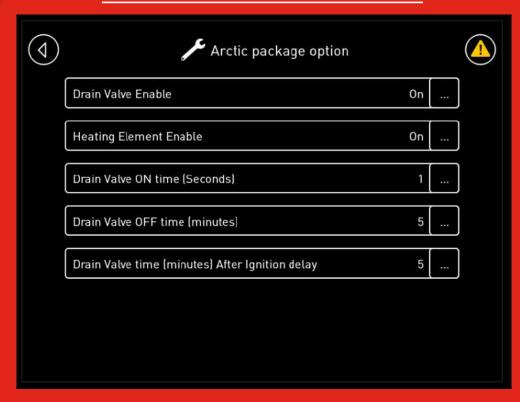

#### STANDARD SETTINGS W/ OPTION ON

- HEAT TRACE ON
- VALVE OPENS FOR X SEC EVERY Y MIN